


Inserting Batteries


Remove the mounting plate from the back of the light by firmly pushing it in the direction shown in this drawing.

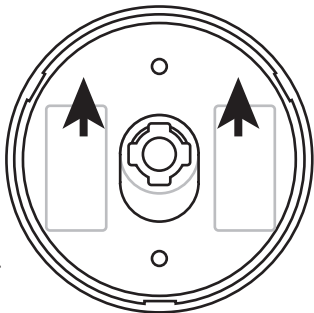

Rotate the battery cover of the light in a counter-clockwise direction as indicated by the arrows on the cover. Insert 3 AAA batteries in the direction indicated in the battery compartment. Do not mix battery types (heavy duty, alkaline, or rechargeable). Replace the battery cover and rotate it in a clock-wise direction to lock it.

Mounting Plate

Important! Make certain that the surface is clean and dry before applying the mounting plate to a wall or other flat surface. Using either mounting tape or screws (both supplied), firmly affix the mounting plate to the desired location. On

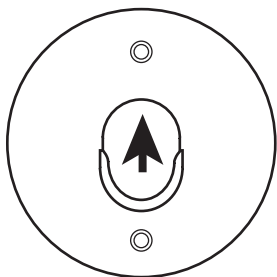

vertical surfaces, the mounting plate should be installed with the "U-bracket" pointing up as shown in the drawing above. Slide the light on to the mounting plate until it locks into place.

Directions for Use

Push the button located in the center of the front lens cover to turn the light ON and OFF. The light may be removed from the mounting plate to change the batteries or for use as a hand-carried light.