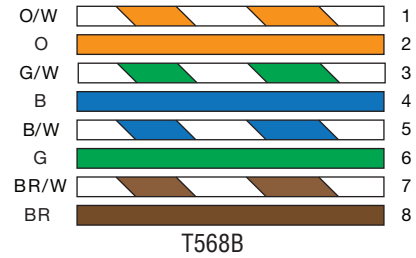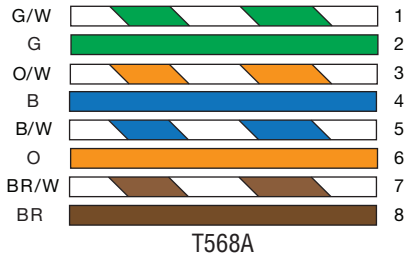# CON3095 INSTALLATION
2-Piece RJ45 Connectors for Solid Cat6

These RJ45 Connectors are perfect for use with Solid Cat6 cable and makes for quick, reliable terminations. With the 2-piece design, these connectors make installation easier than ever.

G/W		1
G		2
O/W		3
B		4
B/W		5
O		6
BR/W		7
BR		8

T568A

O/W		1
O		2
G/W		3
B		4
B/W		5
G		6
BR/W		7
BR		8

T568B

1

Components.
1. Cable (not included)
2. Load Bar (A)
3. Plug Housing (B)

2

Cut cable jacket exposing approximately 1¼" of the twisted pairs.

1¼"

3

Untwist the pairs arranging them in the proper order (shown above).

4

Cut conductors at an angle. Slip load bar (A) over conductors.

5

Push load bar (A) until it hits the jacket and the conductors are exposed at the other end.

6

Cut excess wire at the end of the load bar (A).

7

Insert into plug housing (B). Push forward until conductors engage their openings.

8

Plug is ready to terminate using a crimp tool.