


SPEEDY'Z SCREW-IN CABLE PASS THRU PORT


CON6040WHS INSTRUCTION MANUAL

Installation


1. Separate silicone panel and the main body of the product.

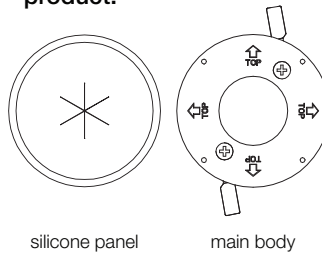


2. Drill a round hole with the diameter of 55 mm.

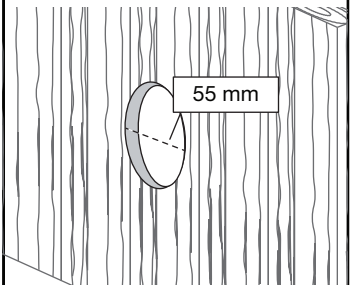


3. Run cables through the hole in the wall.

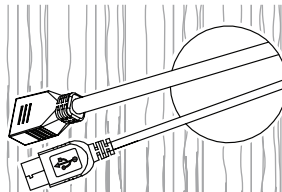

4. Thread cable through the main body. Screw in two screws as shown by A & B.

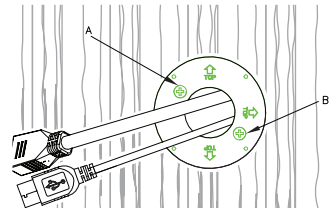

5. Thread cable through silicone panel and insert in the main body.

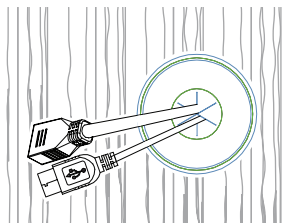

6. Finally, rotate the silicone panel to ensure the silicone panel is securely fastened.

