


Introduction


This heavy-duty bracket set is ideal for mounting TV antenna and/or Dish masts to the exteriors of buildings in almost any application. The 8" brackets are crafted of sturdy metal for optimal outdoor use in any weather condition. They can accommodate masts with an outer diameter up to 1-1/2". (2) Brackets and necessary lag bolts for installation are included.

What's Included


Mount Pieces

		
A (x4)	B (x1)	C (x2)

Mount Assembly Hardware



			
M-A (x4)	M-B (x8)	M-C (x1)	M-D (x2)


Wall Mounting Hardware


W-A (x5)

Tools

You Will Need

			
Drill	Pencil	Stud Finder	Socket Wrench

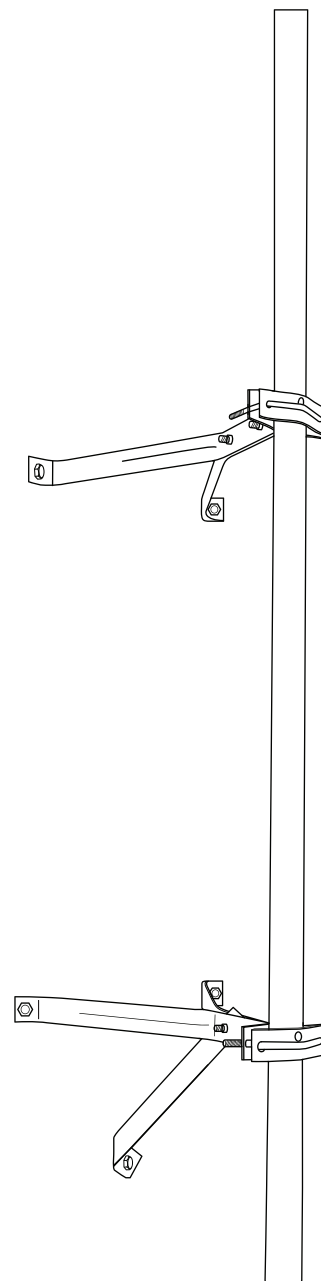


SKY32814 INSTALLATION

8-Inch Heavy-Duty Wall Mount Kit for TV Antenna Mast


1

Assemble the base of the Y mount.

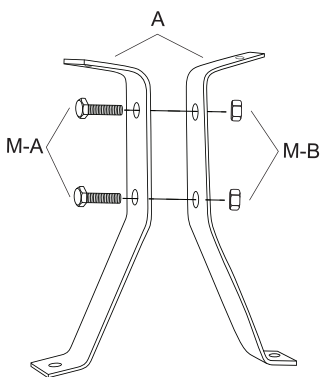


5

Drill a 3/16" hole for each mounting screw.

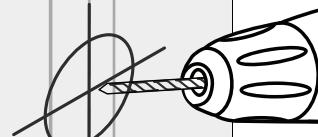


2

Assemble the base of the tripod mount.

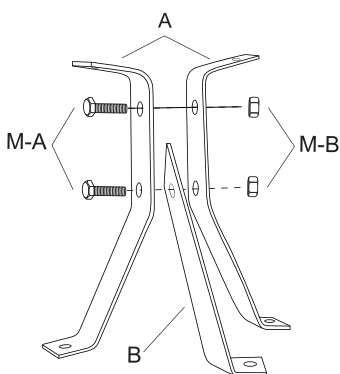


6

Fasten the mounting brackets to the wall.

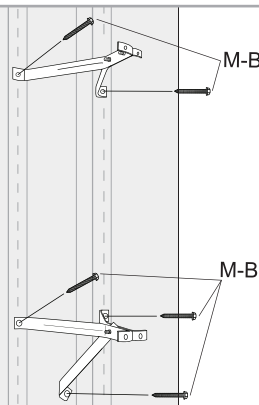


3

Use stud finder to locate studs.

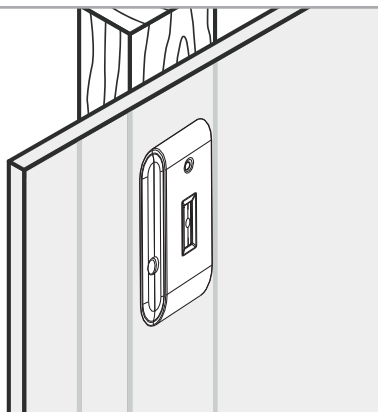


7

Secure antenna mast to mounts using U-bolts and plates.

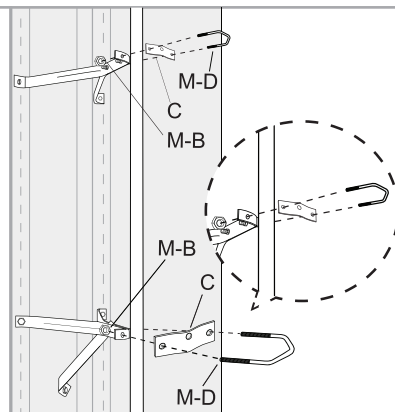

4

Align bracket mounts with studs and mark drilling locations

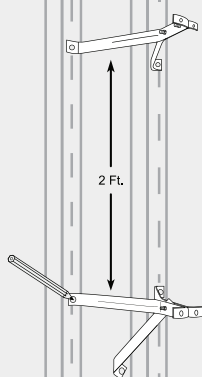

8

Drill the small lag screw through the U-bolt plate and mast to prevent torsion.

